TAXI CHART

TORONTO/LESTER B. PEARSON INTL
TORONTO ON

VOT	ATIS	CLNC DEL	APRON ADVSY	GND	TORONTO TWR	DEP
114.8	112.15 120.825	121.3	TML 1 122.275 (122.825) TML 2 122.075 (122.825) TML 3 122.875 INFIELD 122.075 (122.825) PAD CONTROL 131.175	118.0 119.1 121.9 121.65 275.8	118.7 118.35 236.6	128.8 127.575 363.8

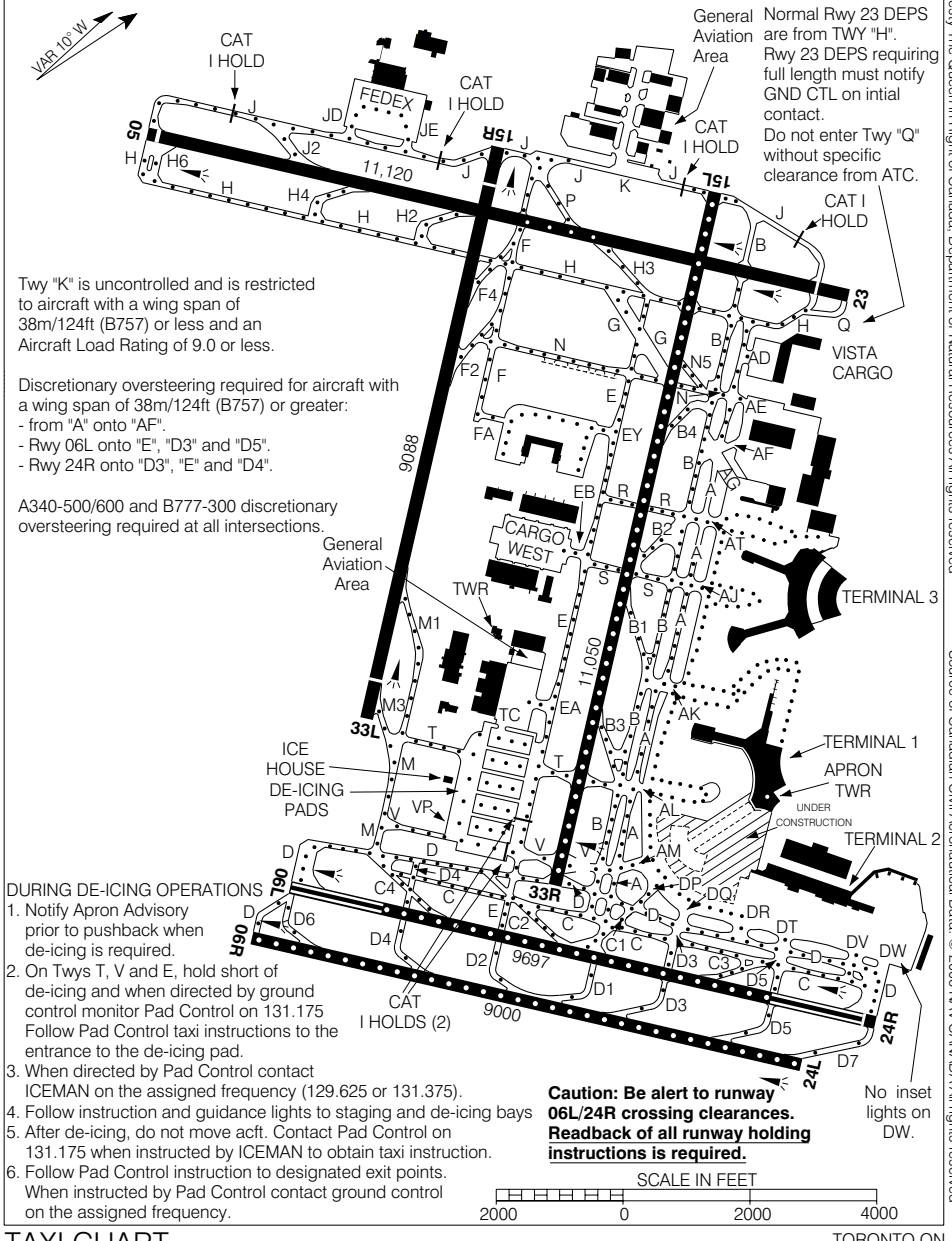

DURING DE-ICING OPERATIONS

1. Notify Apron Advisory prior to pushback when de-icing is required.
2. On Twys T, V and E, hold short of de-icing and when directed by ground control monitor Pad Control on 131.175 Follow Pad Control taxi instructions to the entrance to the de-icing pad.
3. When directed by Pad Control contact ICEMAN on the assigned frequency (129.625 or 131.375).
4. Follow instruction and guidance lights to staging and de-icing bays
5. After de-icing, do not move acft. Contact Pad Control on 131.175 when instructed by ICEMAN to obtain taxi instruction.
6. Follow Pad Control instruction to designated exit points. When instructed by Pad Control contact ground control on the assigned frequency.

Caution: Be alert to runway 06L/24R crossing clearances. Readback of all runway holding instructions is required.

No inset lights on DW.

SCALE IN FEET
2000 0 2000 4000

© 2006 Her Majesty The Queen in Right of Canada, Department of Natural Resources All rights reserved
Source of Canadian Civil Aeronautical Data. © 2006 NAV CANADA All rights reserved