

TAXI CHART


OTTAWA/MACDONALD-CARTIER INTL
OTTAWA ON

VOT 111.8	ATIS (Eng) 121.15 265.6 (Fr) 132.95 382.05	OTTAWA CLNC DEL 119.4 283.5	OTTAWA TWR 118.8 236.6	OTTAWA GND 121.9 275.8	DEP OTTAWA DEP 128.175 252.5
---------------------	---	---------------------------------------	----------------------------------	----------------------------------	--

© 2006 Her Majesty The Queen in Right of Canada, Department of Natural Resources. All rights reserved


Source of Canadian Civil Aeronautical Data: © 2006 NAV CANADA. All rights reserved

Rwy 04-22: 3300 x 75

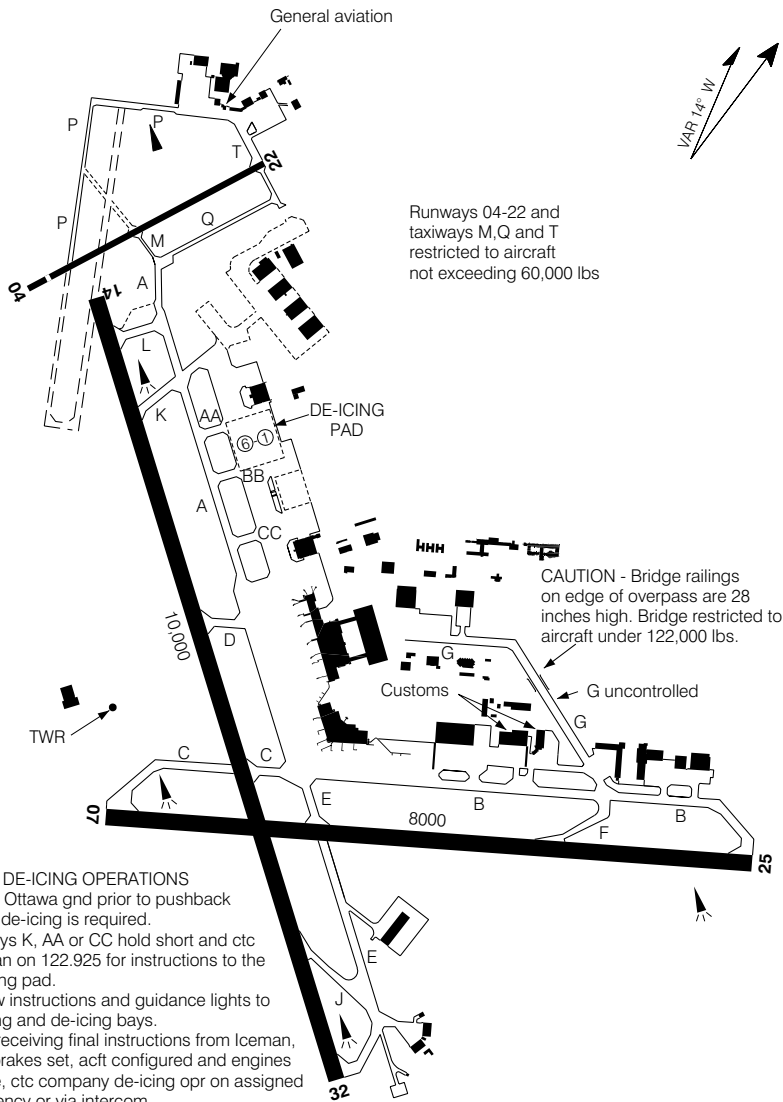

DURING DE-ICING OPERATIONS

1. Notify Ottawa gnd prior to pushback when de-icing is required.
2. On twys K, AA or CC hold short and ctc Iceman on 122.925 for instructions to the de-icing pad.
3. Follow instructions and guidance lights to staging and de-icing bays.
4. After receiving final instructions from Iceman, with brakes set, acft configured and engines at idle, ctc company de-icing opr on assigned frequency or via intercom.
5. After de-icing do not move acft, ctc Iceman to advise that all equipment and staff are away from the acft.
6. Follow Iceman instructions to designated exit points, holding short of twy A, ctc gnd 121.9.



TAXI CHART
EFF 16 FEB 06

CHANGE: Comm box

OTTAWA ON
OTTAWA/MACDONALD-CARTIER INTL
NAD83